
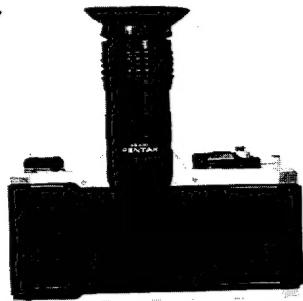


PENTAX

REFCONVERTER

(STANDARD MODEL, MODEL-II, MODEL-M)

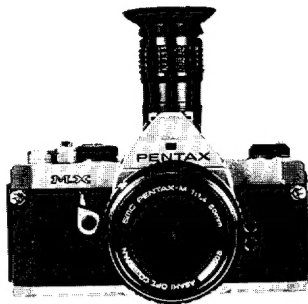

REFCONVERTER-M

1. Eyepiece
2. Diopter Adjustment Ring
3. Magnification Selector
4. Attachment Frame
5. Lock Lever




①

②

③

④

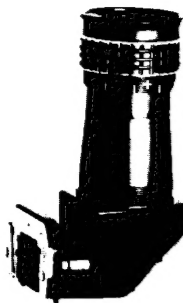

For general use.

REFCONVERTER-II



EYECUP

①

②

⑤

④



**For use with the Bulk
Film Magazine Back.**

REFCONVERTER

①

②




SPECIFICATIONS

	Refconverter-M	Refconverter-II	Refconverter
CAMERA MODEL	Pentax LX, ME Super, ME, MV1, MX.	Pentax K2 DMD, K2, KX, KM, and S-series cameras.	Pentax S-series cameras, and the Pentax KM. (Not for use with ES, ESII, K2DMD, K2 or KX.)
MAGNIFICATION	1X or 2X.	1X	1X
IMAGE ORIENTATION	Unreversed, laterally correct.	Unreversed, laterally correct.	Unreversed, but laterally incorrect.
DIOPTER ADJUSTMENT	Approx. +4 to -4 diopters.	Approx. +4 to -4.	Approx. +2 to -2.
DIMENSIONS	33 x 72 x 51mm.	32 x 80 x 49mm.	27 x 90 x 45mm.
WEIGHT	117g.	129g.	67g.
ACCESSORIES	Eyecup & case.	Eyecup & case.	Case.
ATTACHMENT METHOD	Slide onto camera eyepiece grooves.	Slide onto camera eyepiece grooves while squeezing the Lock Lever (model for general use only).	Slide onto camera eyepiece grooves.

SPECIAL FEATURES

1

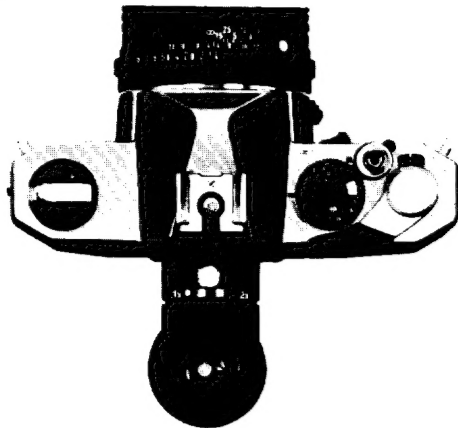

Illust. 1 When the white dot of the Magnification Selector (3) is aligned with the figure, "1X" the complete focusing screen of the camera is visible, as it is with all other Pentax Refconverters. However, for critical focusing, the Magnification Selector can be rotated so that the white dot is aligned with "2X," and the central area of the focusing screen will then be visible at two times magnification.

Refconverter-II shares the following features with Refconverter-M: an unreversed and laterally correct image, the camera back cover can be opened and closed while the Refconverter is attached to the eyepiece of the camera, and the Refconverter comes with an accessory eyecup. Additionally, the Diopter Adjustment Ring is calibrated for simplified readjustment.

4

DIOPTER ADJUSTMENT • ACCESSORY EYECUP

DIOPTER ADJUSTMENT

As all Pentax Refconverters have a built-in diopter adjustment provision, there is no need for accessory diopter correction lenses.

Illust. 2 To adjust the Refconverter to your eyesight, attach it to the eyepiece of the camera, and without focusing the lens, face a plain background. Next, while looking through the eyepiece of the Refconverter, rotate the Diopter Adjustment Ring until the micoprism and ground glass areas of the focusing screen appear as sharp as possible.

Once Refconverter-M has been adjusted, there is no need for readjustment when using the Magnification Selector.

ACCESSORY EYECUP

Illust. 3 The eyepiece frame of Refconverter-M and Refconverter-II is made of rubber and easily removed (simply pry it off with your fingers).

Once the rubber eyepiece frame is removed, it can be replaced with the accessory eyecup. Use of the eyecup is recommended for non-eyeglass wearers as it will block out extraneous light and make the Refconverter easier to work with.

2



3




APPLICATIONS

LOW ANGLE SHOTS

Illust. 1 When desiring to use the camera at low angles, such as when photographing insects and flowers, you will find the Refconverter extremely helpful. This is particularly so when the camera is resting on the ground or floor.


1

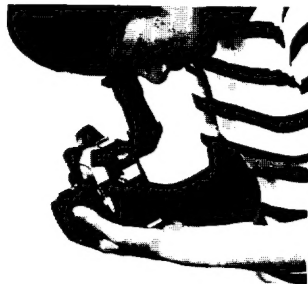

2



3

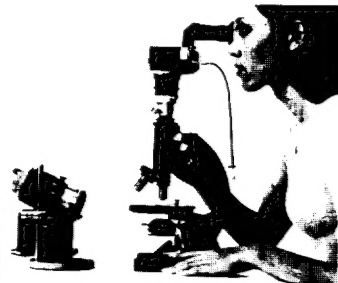

Illust. 2 Refconverter-M and Refconverter-II are also useful when desiring to obtain high angle shots, such as when working in crowds; however, this application is not possible with the standard model because the image is reversed from left-to-right (laterally incorrect).

SPECIAL APPLICATIONS


Illust. 3-4 In special applications, such as photomicrography, astrophotography, and copying, the camera may be at an angle inconvenient to use without a Refconverter.

CANDID PHOTOGRAPHY

Illust. 5-6 You will also find Refconverter-M and

Refconverter-II useful aids when desiring to photograph others without their knowledge. Use of the Refconverter will allow you to face the camera at the subject while you appear to be looking elsewhere. (The standard Refconverter, however, cannot be used for this application for the same reason explained in Illust. 2).

4

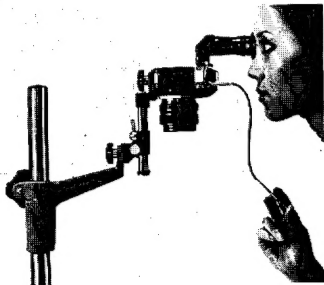

5



6





Asahi Optical Co., Ltd. C.P.O. 895, Tokyo 100-91, JAPAN

Asahi Optical Europe N.V. Weiveldlaan 3-5, 1930 Zaventem Zuid-7, BELGIUM

Pentax Handelsgesellschaft mbH. 2000 Hamburg 54 (Lokstedt), Grandweg 84, WEST GERMANY

Pentax Corporation 35 Inverness Drive East, Englewood, Colorado 80112, U.S.A.

Pentax Canada Inc. 1760 West 3rd Avenue, Vancouver, B.C. V6J 1K5, CANADA

Pentax U.K. Limited Pentax House, South Hill Avenue, South Harrow, Middlesex HA2 0LT, U.K.

Asahi Optical Brasileira Ind. e Com. Ltda. Rua Estados Unidos, 1053, São Paulo-SP, BRASIL

06356

5/81 Printed in Japan